

58mmUSB 90°

OCPP -586

ification

	384/203DPI
	384/ANKA 12 * 24 1.5W * 3.0H mm /24 * 24 3.0 * 3.0 mm
	JAN13/EAN13/JAN8/EAN8/CODE39 QR CODE
	EPSON ESC / POS
	OEM437 / / OEM850 / OEM860 / OEM863 / OEM865 / / WPC1252 / OEM866 / OEM852 / OEM858 / IranII / PT151,1251 / OEM747 / WPC1257 / OEM864 / WPC1255 /
	90°
	57.5±0.5
	0.06-0.08mm
MCBF	50
	190 * 132 * 119
	1.2KG
	Φ75mm
	RS-232C USB LAN
	9X 2000 2003 XP Vista Win 7 Win8 Win10 ESPON
	DC12V / 3A
	DC12V / 1A
	0-45°C 10-80
	-10-60°C 10-90



**58mm Thermal
Receipt Printer**
OCPP-586



Product Picture





Features

Simple but not easy

Small size and elegant design





Can drive cash drawer



Compatible with ESPON



High printing speed



Printing head life: 50KM



All-round show





Application Area

Food delivery, restaurant, Traffic Citation,
Logistics, Transportation, Warehouse management,
Delivery, Illegal Parking Ticket, Drugstore,
Price Tag, Retail/Farm



Parameter

Printing Method	Direct thermal
Print Density	384dots/line (203DPI)
Character Size	384dots/line, ANK character, Font: A: 12*24dots, 1.5(W)*3.0(H) mm Simplified/Traditional: 24*24dots, 3.0(W)*3.0(H)mm
Barcode Type	JAN13 (EAN13) JAN8 (EAN8) CODE39
Printing Command	Compatible with EPSON ESC/POS
Language	OEM437/Katakana/OEM850/OEM860/OEM863/OEM865/West Europe/ Greek/Hebrew/East Europe/Iran/WPC1252/OEM866/OEM852/ OEM858/IranII/Latvian/ Arabic/PT151,1251/OEM747/ WPC1257/Vietnam/OEM864/Hebrew/WPC1255/Thai
Printing Speed	90mm/sec
Paper Width	57.5±0.5mm
Paper Thickness	0.06-0.08mm
MCBF(life)	50km
Dimension	190*132*119mm
Gross Weight	1.2KG
Auto Cutter	manual cutter
Sensor	Paper Near End Sensor, Paper End Sensor, Cover open sensor
Roll Paper	Φ75mm
Interface	RS-232C, Parallel, USB, LAN


Driver	win 9X, win 2000, win 2003, win XP, win vista, win 7 compatible with ESPON
Printer Supply	DC12V/3A
Cash Drawer Control	DC12V/1A
Working Temperature	0-45°C, Humidity: 10-80%
Saving Temperature	-10-60°C, Humidity: 10-90%

Paper Roll Installation



- A Open the printer cover.
- B Install the roller in the roll paper, and put them into the printer.
- C Pull out some paper outside the printer and then close the printer cover.
- D Close the top cover. Press the printer cover to avoid error position of roll paper.
- E Tear-off the paper correctly.

Connection

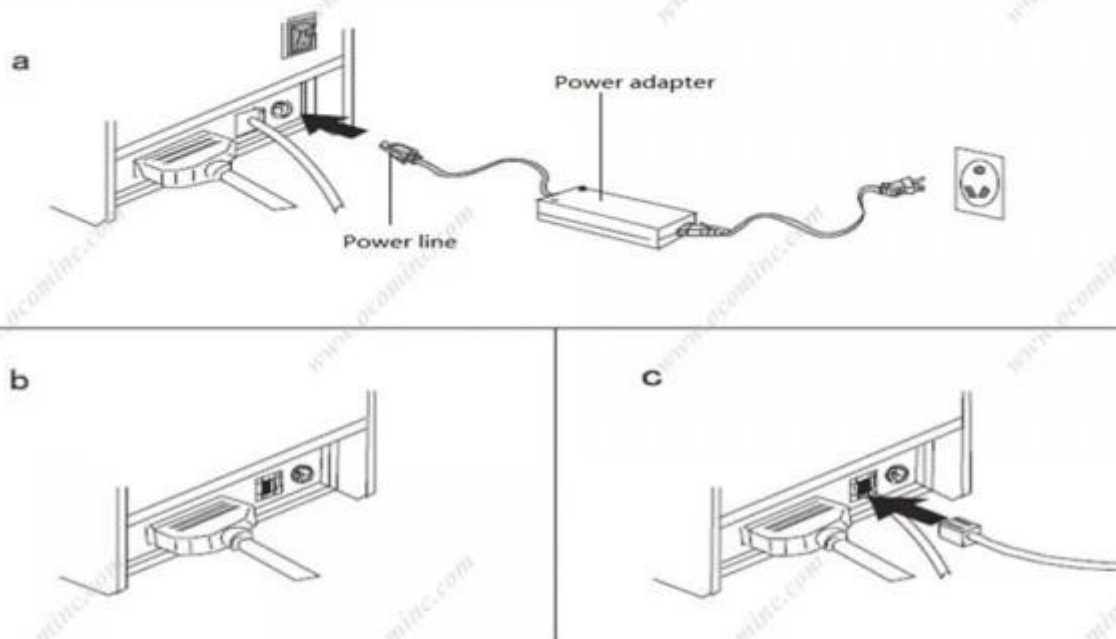

- a. Plug the DC cord connector into the printer's power connector..
- b. Plug the data cable connector into the printer's interface connector.
- c. Plug the drawer cable into the drawer kick-out connector on the back of the printer next to the interface connector.

Shipping and payment

1. Air, Sea, Express(DHL, FedEx, UPS, EMS, TNT and so on)
2. EXPRESS: around 3-7 working days to arrive
3. INTERNATIONAL AIR MAIL: usually around 2-4 days to arrive, will also depend on

